

JVC



ENGLISH


 

DEUTSCH

FRANÇAIS

NEDERLANDS

CD RECEIVER
CD-RECEIVER
RECEPTEUR CD
CD-RECEIVER

KD-SX1000R

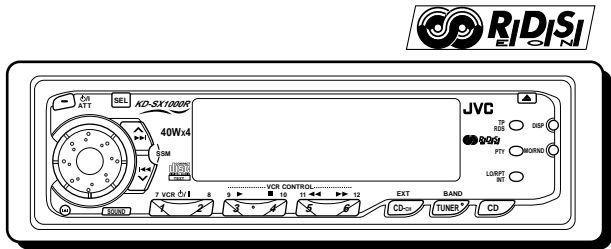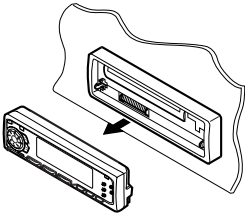

For installation and connections, refer to the separate manual.

Angaben zu Einbau und Verkabelung entnehmen Sie bitte der gesonderten Anleitung.

Pour l'installation et les raccordements, se référer au manuel séparé.

Zie de afzonderlijke handleiding voor details aangaande het installeren en verbinden van het toestel.

INSTRUCTIONS


BEDIENUNGSANLEITUNG
MANUEL D'INSTRUCTIONS
GEbruikSAANWIJZING

VNN3874-312S

[E]

Position And Reproduction Of Labels

Bottom panel of the main unit

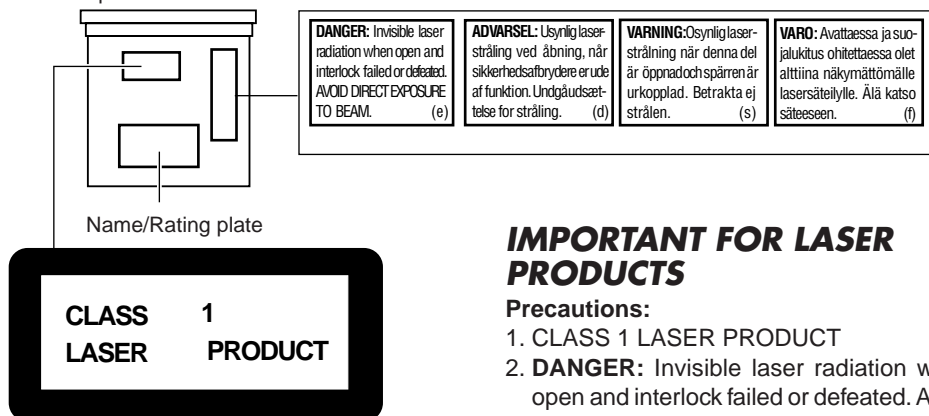

Caution:
This product contains a laser component of higher laser class than Class 1.

CAUTION on Volume Setting

CDs produce very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a CD and adjust it as required during playback.

Note:

For security reasons, a numbered ID card is provided with this unit, and the same ID number is imprinted on the unit's chassis. Keep the card in a safe place, as it will help the authorities to identify your unit if stolen.

IMPORTANT FOR LASER PRODUCTS

Precautions:

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This CD player uses invisible laser radiation and is equipped with safety switches to prevent radiation emission when unloading CDs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

BEFORE USE

* For safety....

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.


* Temperature inside the car....

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.


CONTENTS

BASIC OPERATIONS	4
RADIO BASIC OPERATIONS	5
Listening to the radio	5
Storing stations in memory	6
Tuning into a preset station	8
Selecting FM reception sound	8
RDS OPERATIONS	9
What you can do with RDS EON	9
Other convenient RDS functions and adjustments	15
CD OPERATIONS	18
Playing a CD	18
Locating a track or a particular portion on a CD	19
Selecting CD playback modes	20
Prohibiting CD ejection	21
Playing the CD Text	22
SOUND ADJUSTMENTS	23
Selecting preset sound modes	23
Adjusting the sound	24
Storing your own sound adjustments	25
OTHER MAIN FUNCTIONS	26
Setting the clock	26
Changing the general settings (PSM)	27
Assigning names to the sources	34
Detaching the control panel	37
REMOTE OPERATIONS	38
Installing the batteries	38
Using the remote controller	39
CD CHANGER OPERATIONS	40
Playing CDs	40
Selecting CD playback modes	42
EXTERNAL COMPONENT OPERATIONS	43
Playing VCRs	43
MAINTENANCE	44
Handling CDs	44
TROUBLESHOOTING	45
SPECIFICATIONS	46

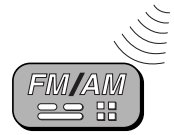



BASIC OPERATIONS

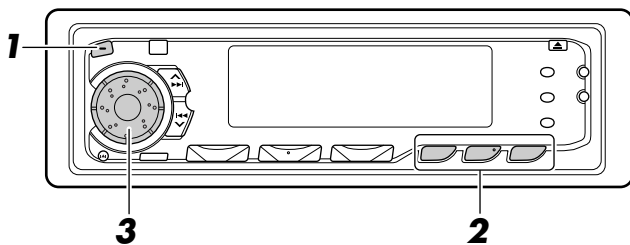**Note:**

 
When you use this unit for the first time, set the built-in clock correctly, see page 26.

1

Turn on the power.

Note on One-Touch Operation:

When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.

2


Select the source.

To operate the tuner, see pages 5 – 17.

To operate the CD player, see pages 18 – 22.

To operate the CD changer, see pages 40 – 42.


To operate the external component connected to the LINE IN plugs, see page 43.

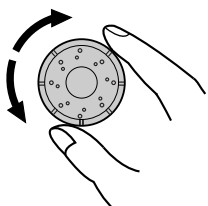3

Adjust the volume.

Volume level appears.

Volume level indicator (see page 29).

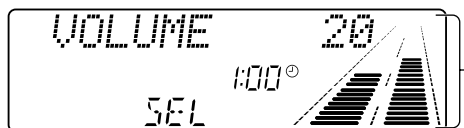**4**

Adjust the sound as you want (see pages 23 – 25).

To drop the volume in a moment


Press ϕ /I/ATT briefly while listening to any source. “ATT” starts flashing on the display, and the volume level will drop in a moment.

To resume the previous volume level, press the button briefly again.


To turn off the power

Press ϕ /I/ATT for more than 1 second.

Listening to the radio

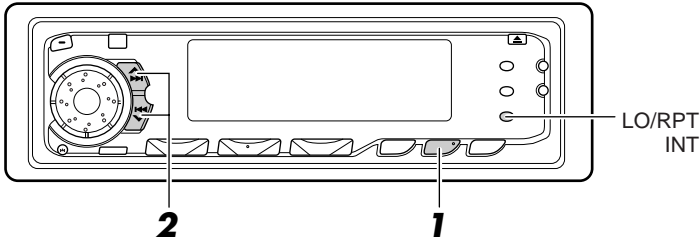


1

 


Select the band (FM1, FM2, FM3 or AM).

You can select any one of FM1, FM2, and FM3 to listen to an FM station.

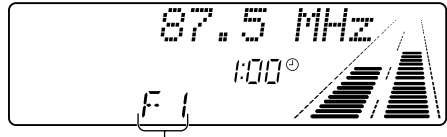


Selected band appears.

2

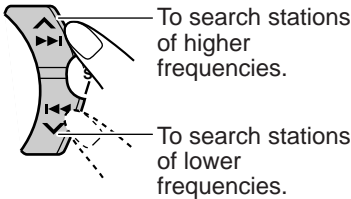

Start searching a station.

When a station is received, searching stops.

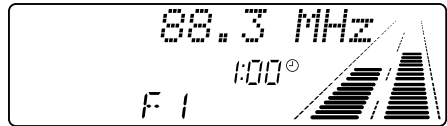

To stop searching before a station is received, press the same button you have pressed for searching.

To tune in a particular frequency without searching

1 Press TUNER/BAND repeatedly to select the band (FM or AM).

2 Press and hold $\blacktriangleright\blacktriangleright\blacktriangleright \blacktriangle$ or $\blacktriangleleft\blacktriangleleft\blacktriangleleft \blacktriangledown$ until "M" starts flashing on the display.

Now you can manually change the frequency while "M" is flashing.

3 Press $\blacktriangleright\blacktriangleright\blacktriangleright \blacktriangle$ or $\blacktriangleleft\blacktriangleleft\blacktriangleleft \blacktriangledown$ repeatedly until the frequency you want is reached.

- If you hold down the button, the frequency keeps changing (in 50 kHz intervals for FM and 9 kHz intervals for AM-MW/LW) until you release the button.

To tune in only stations with strong signals

Press the LO/RPT/INT (Local/Repeat/Intro) button so that "LOCAL ON" appears on the display. Each time you press the button, "LOCAL ON" and "LOCAL OFF" appears alternately.

Note:

This function only works while searching stations including SSM preset (see page 6).




Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.


- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations

FM station automatic preset: SSM


You can preset 6 local FM stations in each FM band (FM1, FM2 and FM3).

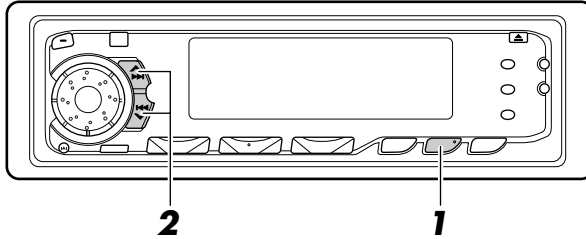


1

 

 Select the FM band number (FM1, FM2 or FM3) you want to store FM stations into.



2

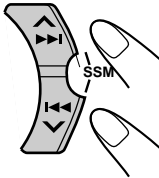

Press and hold both buttons for more than 3 seconds.



"SSM" appears, then disappears when automatic preset is over.


Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2 or FM3). These stations are preset in the number buttons — No. 1 (lowest frequency) to No. 6 (highest frequency).

When automatic preset is over, the station stored in number button 1 will be automatically tuned in.


Manual preset

You can preset up to 6 stations in each band (FM1,FM2,FM3 and AM) manually.

EXAMPLE: Storing an FM station of 88.3 MHz into the preset number 1 of the FM1 band

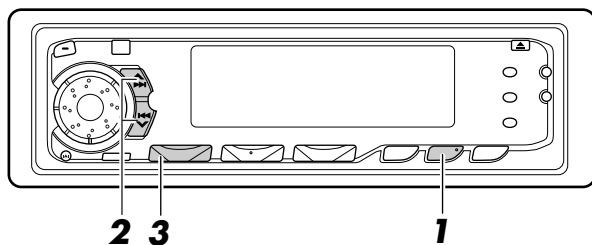


1

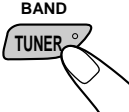


BAND TUNER


Select the FM1 band.

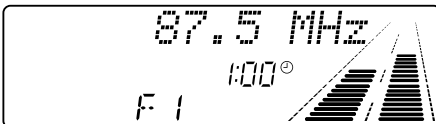


2

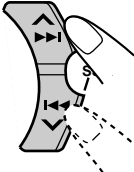

Tune into a station of 88.3 MHz.
See page 5 to tune into a station.




3

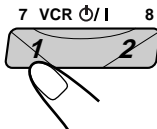


7 VCR ϕ /I 8

Press and hold the number button (in this example, 1) for more than 2 second.



Preset number and "MEMO" flashes alternately for a while.

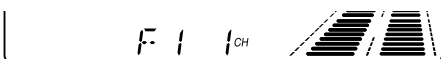

4

Repeat the above procedure to store other stations into other preset numbers.



Notes:

- A previously preset station is erased when a new station is stored in the same preset number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.



Tuning into a preset station

You can easily tune into a preset station.

Remember that you must store stations first. If you have not stored them yet, see pages 6 and 7.

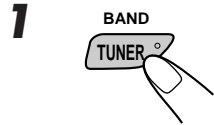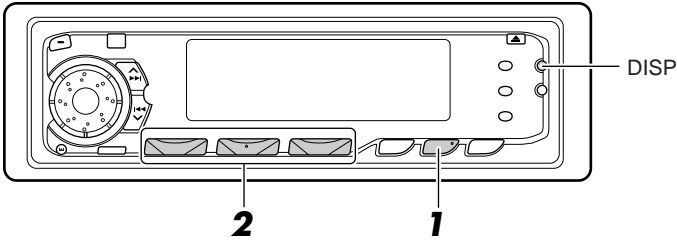

 Select the band (FM1, FM2, FM3 or AM) you want.

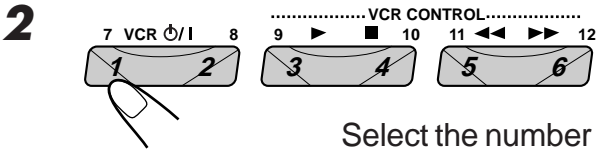

Select the number (1 – 6) for the preset station you want.

To change the display information while receiving an FM RDS station

Press DISP. Each time you press the button, the display changes as follows:



Selecting FM reception sound

When an FM stereo broadcast is hard to receive:

Press MO/RND (Mono/Random) while listening to an FM stereo broadcast. The sound you hear becomes monaural but reception will be improved.



Lights up when receiving an FM broadcast in stereo.

To restore the stereo effect, press the same button again.



What you can do with RDS EON

RDS (Radio Data System) allows FM stations to send an additional signal along with their regular program signals. For example, the station send their station names, as well as information about what type of program they broadcast, such as sports or music, etc. Another advantage of RDS function is called “EON (Enhanced Other Networks).” The EON indicator lights up while receiving an FM station with the EON data. By using the EON data sent from a station, you can tune into a different station of a different network broadcasting your favorite programme or traffic announcement while listening to another programme or to another source such as CD.

By receiving the RDS signals, this unit can do the following:

- Tracing the same programme automatically (Network-tracking Reception)
- Standby Reception of TA (Traffic Announcement) or your favorite programme
- PTY (Program Type) search
- TA (Traffic Announcement) search
- And some other functions

Tracing the same programme automatically (Network-Tracking Reception)

When driving in an area where FM reception is not good, the tuner built in this unit automatically tune in another RDS station, broadcasting the same programme with stronger signals. So, you can continue to listen to the same programme in its finest reception, no matter where you drive. (See illustration.)

Two types of the RDS signals are used to make Network-Tracking Reception work correctly — PI (Programme Identification) and AF (alternative Frequency) data.

Without receiving these data correctly from the RDS station you are listening to, Network-Tracking Reception will not operate.



To use Network-Tracking Reception, press and hold TP/RDS (Traffic Programme/Radio Data System) for more than 1 second. Each time you press and hold the button, Network-Tracking Reception modes change as follows:

→ **Mode 1** → **Mode 2** → **Mode 3**



Mode 1 (AF:on / REG:off)

Network-Tracking is activated with Regionalization set to “off.”
Switches to another station within the same network when the receiving signals from the current station become weak.

Note:

In this mode, the programme may differ from the one currently received.


Mode 2 (AF:on / REG:on)

Network-Tracking is activated with Regionalization set to “on.”
Switches to another station, within the same network, broadcasting the same programme when the receiving signals from the current station become weak.

Mode 3 (AF:off / REG:off)

Network-Tracking is deactivated.

The same programme can be received on different frequencies.

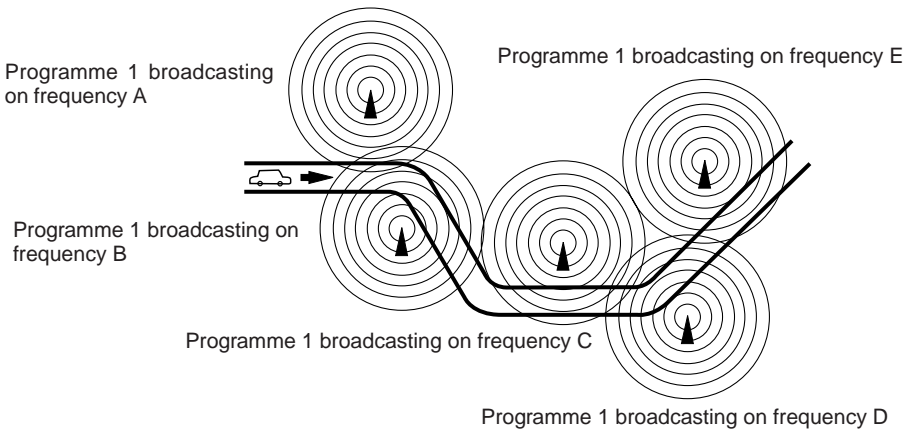

Using Standby Reception

Standby Reception allows the unit to switch temporarily to a programme of your favorite programme (PTY: Programme Type) and Traffic Announcement (TA) from the current source (another FM station, CD, and other connected components).

Note:

Standby Reception will not work if you are listening to an AM station.

TA Standby Reception



- When TP/RDS is pressed briefly in the FM mode, the TP indicator is lit during reception of a TP station and the TA standby mode is engaged.

Note:

When the station being received is not a TP station, the TP indicator flashes. Press ►►▲ or ◀◀▼ to engage the TA standby mode. "SEARCH" appears on the display, and TP station search starts. When a TP station is tuned in, the TP indicator is lit.

- If you are listening to a CD and wish to hear a TA broadcast, press TP/RDS to enter the TA standby mode. (The TP indicator lights up.)

If a TA programme starts broadcasting while the TA standby mode is active, "TRAFFIC" appears and the FM mode is engaged. The volume increases to the preset "TA VOLUME" level and the TA programme can be heard (see page 15).

Note:

To deactivate the TA standby mode, press TP/RDS again.

PTY Standby Reception



- When PTY is briefly pressed in the FM mode, the PTY indicator is lit during reception of a PTY station and the PTY standby mode is engaged. The selected PTY name stored on page 12 flashes for 5 seconds.

Note:

When the station being received is not a PTY station, the PTY indicator flashes. Press ►►▲ or ◀◀▼ to engage the PTY standby mode. "SEARCH" appears on the display, and PTY station search starts. When a PTY station is tuned in, the PTY indicator is lit.

- If you are listening to a CD and wish to hear a selected PTY broadcast, press PTY to enter the PTY standby mode. (The PTY indicator lights up.)

If the PTY starts broadcasting while the PTY standby mode is active, the selected PTY name appears and the FM mode is engaged. The selected PTY can then be heard.


Note:

To deactivate the PTY standby mode, press PTY again.



Selecting Your Favorite Programme for PTY Standby Reception

You can select your favorite programme for PTY Standby Reception to store in memory. When shipped from the factory, "NEWS" is stored as the programme type for PTY Standby Reception.

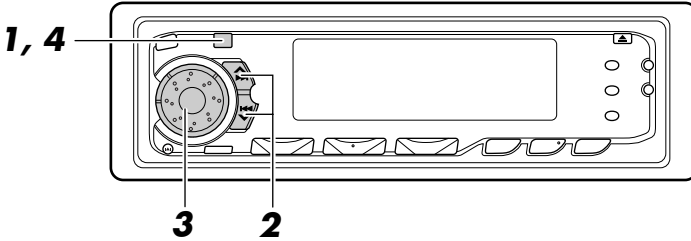


1




Press and hold the button for more than 2 seconds to call up the Preferred Setting Mode (PSM: see page 27).

2

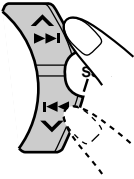

Select "PTY STANDBY" if not shown on the display.

3

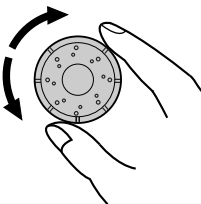

Select one of twenty-nine PTY codes. (See the table on page 17.)

Selected code name appears on the display and is stored into memory.

4




Finish setting.

Searching Your Favorite Programme


You can search one of your 6 favorite programme types stored in memory. When shipped from the factory, the following 6 programme types have been stored in the number buttons (1 to 6).

1	2	3	4	5	6
POP M	ROCK M	EASY M	CLASSICS	AFFAIRS	VARIED


To store your favorite programme types

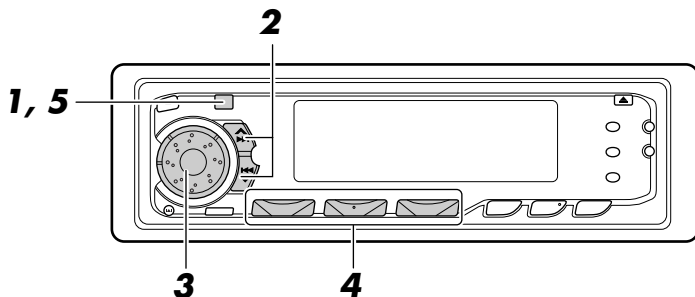

Press and hold the button for more than 2 seconds to call up the Preferred Setting Mode (PSM: see page 27).

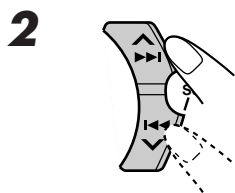


Select "PTY SEARCH" if not shown on the display.

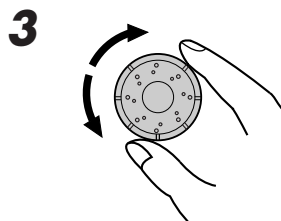

Select one of twenty-nine PTY codes. (See the table on page 17.)

Selected code name appears on the display.

- If the code already stored in memory is selected, it will flash on the display.

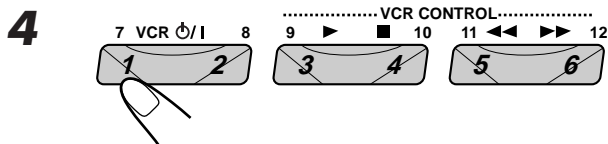

Press and hold the number button for more than 2 seconds to store the PTY code selected into the preset number you want.


PTY preset number appears, and selected code name and "MEMORY" alternates on the display.



Finish setting.




To search your favorite programme type

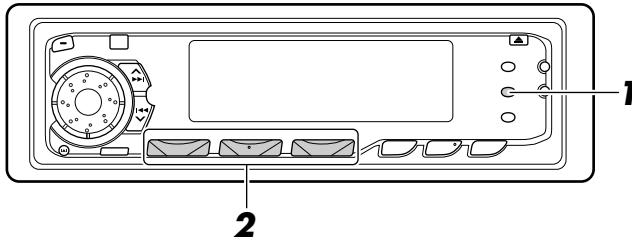


1




Press and hold the button for more than 1 second while listening to an FM station. The last selected PTY code and preset number appear.

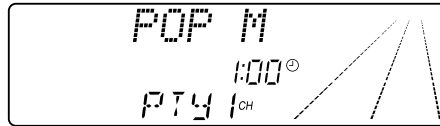

2

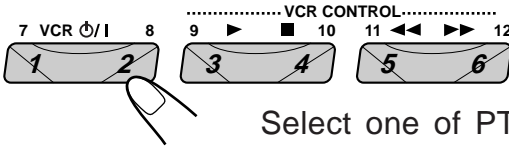

Select one of PTY codes stored in preset number buttons (1 to 6).

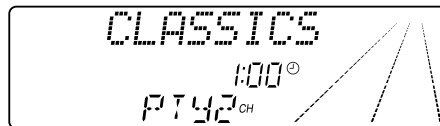

Ex. When "CLASSICS" is stored in preset number button 2.

PTY search for your favorite programme starts after 5 seconds.

- If there is a station broadcasting a programme of the same PTY code you selected, that station is tuned in.
- If there is no station broadcasting a programme of the same PTY code you selected, the station will not change.

Note:

In some areas, the PTY search will not work correctly.

Other convenient RDS functions and adjustments

Automatic selection of the station when using the number buttons

Usually when you press the number button, the preset station is tuned in. However, when the preset station is an RDS station, something different will happen. If the signals from that preset station are not sufficient for good reception, this unit starts searching another station broadcasting the same programme as the original preset station is broadcasting, then if any station broadcasting the same programme is found, the station will be tuned in.

Changing the display mode while listening to an FM station

You can change the initial indication on the display to either station name (PS) or to station frequency, while listening to an FM RDS station.

- See also “Changing the general settings (PSM)” on page 27.
1. Press and hold SEL (select) for more than 2 seconds so that “PSM” appears on the lower part of the display.
 2. Select “DISPLAY MODE” with ►►►▲ or ◀◀◀▼.
 3. Set to the desired indication (either station name or station frequency) with the control dial.

Note:
By pressing DISP, you can also change the display while listening to an FM RDS station. Each time you press the button, the display changes to show the following:



Setting the TA volume level

You can preset the volume level for TA Standby Reception. When a traffic programme is received, the volume level automatically changes to the preset level.

- See also “Changing the general settings (PSM)” on page 27.
1. Press and hold SEL (select) for more than 2 seconds so that “PSM” appears on the lower part of the display.
 2. Select “TA VOLUME” with ►►►▲ or ◀◀◀▼.
 3. Set to the desired volume with the control dial.



Automatic clock adjustment

When shipped from the factory, the clock built in this unit is set to be readjust automatically using the CT (Clock Time) data in the RDS signal.

If you do not want to use automatic clock adjustment, follow the procedure below.

- See also “Changing the general settings (PSM)” on page 27.
1. Press and hold SEL (select) for more than 2 seconds so that “PSM” appears on the lower part of the display.
 2. Select “AUTO ADJUST” with ►►|▲ or |◄◄▼.
 3. Select “ADJUST OFF” by turning the control dial counterclockwise.
Now automatic clock adjustment is canceled.

To reactivate clock adjustment, repeat the same procedure and select “ADJUST ON” in step 3 by turning the control dial clockwise.

Note:

It takes about 2 minutes to adjust the time using the CT data. So, you must tune to the station for more than 2 minutes continuously; otherwise, the clock time will not be adjusted.

PTY codes

No.	Indications on the display	No.	Indications on the display
1	NEWS	16	WEATHER
2	AFFAIRS	17	FINANCE
3	INFO	18	CHILDREN
4	SPORT	19	SOCIAL
5	EDUCATE	20	RELIGION
6	DRAMA	21	PHONE IN
7	CULTURE	22	TRAVEL
8	SCIENCE	23	LEISURE
9	VARIED	24	JAZZ
10	POP M	25	COUNTRY
11	ROCK M	26	NATION M
12	EASY M	27	OLDIES
13	LIGHT M	28	FOLK M
14	CLASSICS	29	DOCUMENT
15	OTHER M		

Descriptions of the PTY Codes


NEWS:	News
AFFAIRS:	Topical programmes expanding on current news or affairs
INFO:	Programmes which impart advice on a wide variety of topics.
SPORT:	Sport events
EDUCATE:	Educational programmes
DRAMA:	Radio plays
CULTURE:	Programmes on national or regional culture

SCIENCE:	Programmes on natural sciences and technology
VARIED:	Other programmes like comedies or ceremonies
POP M:	Pop music
ROCK M:	Rock music
EASY M:	Easy-listening music
LIGHT M:	Light music
CLASSICS:	Classical music
OTHER M:	Other music
WEATHER:	Weather information
FINANCE:	Reports on commerce, trading, the Stock Market, etc.
CHILDREN:	Entertainment programmes for children
SOCIAL:	Programmes on social activities
RELIGION:	Programmes dealing with any aspect of belief or faith, or the nature of existence or ethics
PHONE IN:	Programmes where people can express their views either by phone or in a public forum
TRAVEL:	Programmes about travel destinations, package tours, and travel ideas and opportunities
LEISURE:	Programmes concerned with recreational activities such as gardening, cooking, fishing, etc.
JAZZ:	Jazz music
COUNTRY:	Country music
NATION M:	Current popular music from another nation or region, in that country's language
OLDIES:	Classic pop music
FOLK M:	Folk music
DOCUMENT:	Programmes dealing with factual matters, presented in an investigative style




CD OPERATIONS

Playing a CD

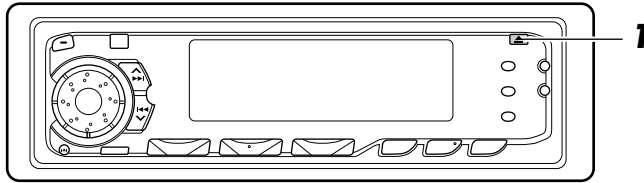


1

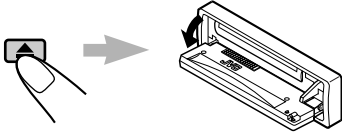

Open the control panel.


2

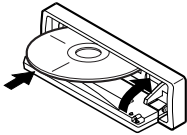

1. Insert a disc into the loading slot.

The unit turns on, draws a CD and starts playback automatically.

2. Close the control panel by hand.

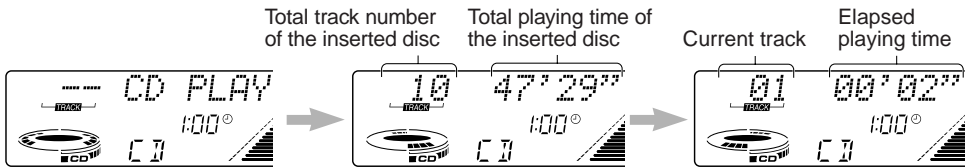

Notes:

- When a CD is inserted up side down, "PLEASE EJECT" appears on the display. When you open the control panel by pressing ▲, the CD automatically ejects.
- When you play the CD Text, the disc title and performer appear on the display. Then the current track and elapsed playing time appears on the display. If a CD Text includes much text information, some may not appear on the display.

Note on One-Touch Operation:

When a CD is already in the loading slot, pressing CD turns on the unit and starts playback automatically.

To stop play and eject the CD

Press ▲.

CD play stops, the control panel opens, then the CD automatically ejects from the loading slot. If you change the source to AM/FM, CD changer or external component, the CD play also stops (without ejecting the CD this time).

Notes:


- If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (CD play will not start this time.)
- You can eject the CD even when the unit is turned off.

To show the assigned name while the elapsed playing time appears


Press DISP. Each time you press the button, elapsed playing time and assigned name (see page 34) appears alternately on the display.



Locating a track or a particular portion on a CD

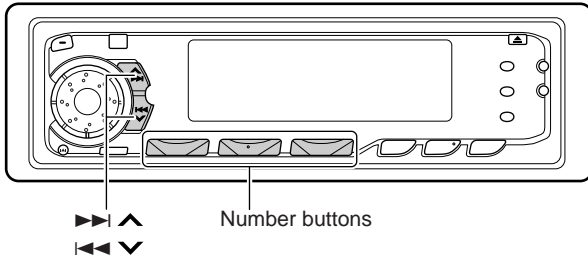


To fast forward or reverse the track

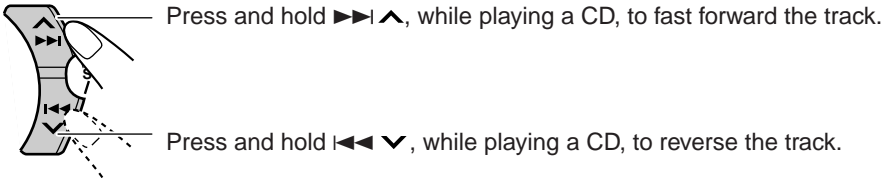

Press and hold **▶▶|▲**, while playing a CD, to fast forward the track.

Press and hold **◀◀|▼**, while playing a CD, to reverse the track.


To go to the next track or the previous track

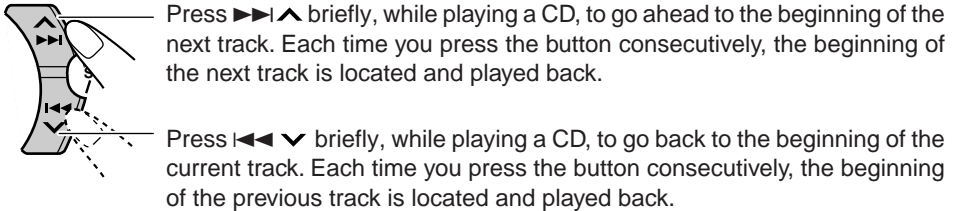

Press **▶▶|▲** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next track is located and played back.

Press **◀◀|▼** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous track is located and played back.

To go to a particular track directly

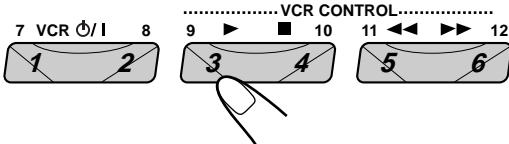


Press the number button corresponding to the track number to start its playback.

- To select a track number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a track number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.




Selecting CD playback modes

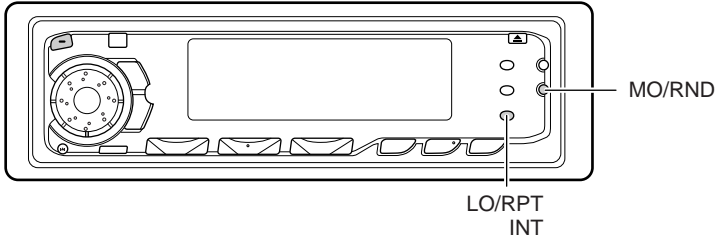


To play back tracks at random (Random Play)

 You can play back all tracks on the CD at random.




Each time you press MO/RND (Mono/Random) while playing a CD, CD random play mode turns on and off alternately. When the random mode is turned on, the RND indicator lights up on the display and a track randomly selected starts playing.

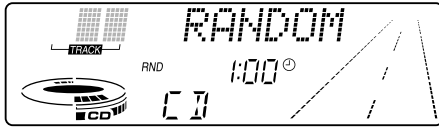

To play back tracks repeatedly (Repeat Play)

 You can play back the current track repeatedly.



Each time you press and hold LO/RPT/INT (Local/Repeat/Intro) for more than 1 second while playing a CD, CD repeat play mode turns on and off alternately.

 
When the repeat mode is turned on, the RPT indicator lights up on the display.

Track number of the currently playing track






To play back only intros (Intro Scan)




Each time you press LO/RPT/INT (Local/Repeat/Intro) briefly while playing a CD, CD intro scan mode turns on and off alternately. When the intro scan mode is turned on, "INTRO" appears on the display for 5 seconds and the track number flashes. The first 15 seconds of each track are played sequentially.

Track number of the currently playing track

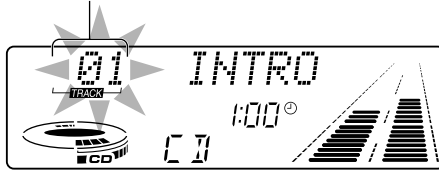


Prohibiting CD ejection

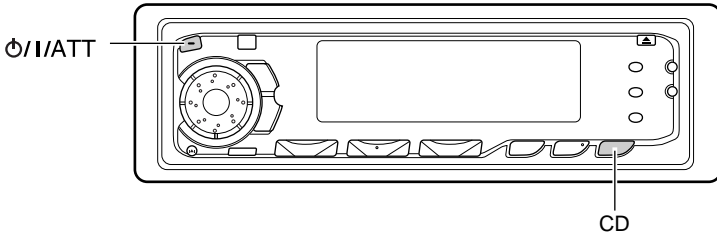

You can prohibit CD ejection and can lock a CD in the loading slot.

While pressing CD, press and hold the power button (labeled with a power symbol and 'I/ATT') for more than 2 seconds. "NO EJECT" flashes on the display for about 5 seconds, and the CD is locked and cannot be ejected.

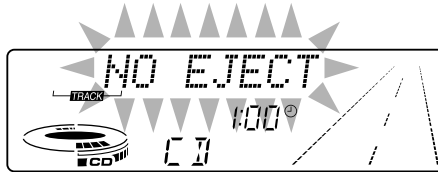


To cancel the prohibition and unlock the CD, press the power button (labeled with a power symbol and 'I/ATT') again for more than 2 seconds, while pressing CD. "EJECT OK" appears on the display, and the CD is unlocked.



Playing the CD Text

In a CD Text, some information about the disc (its disc title, performer and track title) is recorded. You can show these disc information on the display.

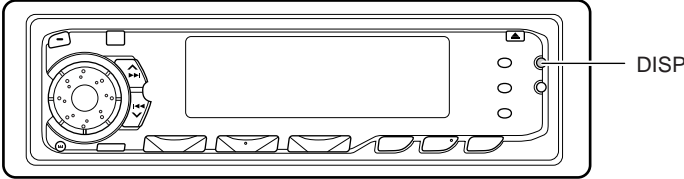

Select text display mode while playing a CD Text.

Each time you press the button, the display changes as follows:



Notes:

 
- The display shows up to 12 characters at one time and scrolls if there are more than 12 characters. See also “Selecting the scroll mode” on page 33.
- If a CD Text includes much text information, track title may not appear on the display. (In this case, “MEMORY FULL” will appear.)
- When you press DISP while playing a CD you have assigned name to, you can also show it on the display. If you have not assigned anything, “NO NAME” appears on the display.



Selecting preset sound modes

You can select a preset sound adjustment suitable to the music genre:

Each time you press SOUND, the sound control mode (SCM) changes as follows.



Indication	For:	Preset values		
		Bass	Treble	Loudness
OFF	(Flat sound)	00	00	On
BEAT	Rock or disco music	+02	00	On
SOFT	Quiet background music	+01	-03	Off
POP	Light music	+04	+01	Off


Notes:

- You can adjust the preset sound control mode to your preference, and store it in memory. If you want to adjust and store your original sound control mode, see “Storing your own sound adjustments” on page 25.
- To adjust only the bass and treble reinforcement levels to your preference, see “Adjusting the sound” on page 24.



Adjusting the sound

You can adjust the sound characteristics to your preference.

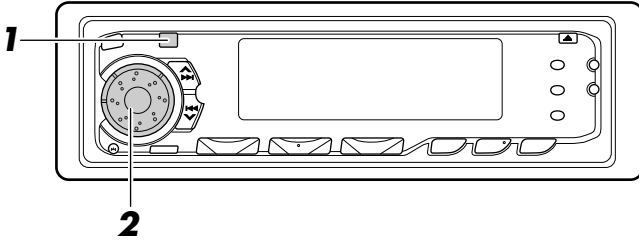

1



Select the item you want to adjust.




Indication	To do:	Range
BASS	Adjust the bass	-06 (min.) — +06 (max.)
TREBLE	Adjust the treble	-06 (min.) — +06 (max.)
FADER*	Adjust the front and rear speaker balance	R06 (rear only) — F06 (front only)
BALANCE	Adjust the left and right speaker balance	L06 (left only) — R06 (right only)
LOUDNESS	Boost low and high frequencies to produce a well-balanced sound at low volume level.	ON — OFF
VOLUME	Adjust the volume	00 (min.) — 50 (max.)

Note:

* If you are using a two-speaker system, set the fader level to "00" (center).

2

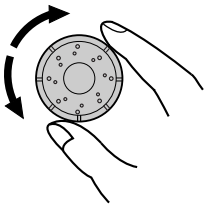

Adjust the level.

 

Note:

Normally the control dial is used to set the volume. So you do not have to select "VOLUME" to adjust the volume level.



Storing your own sound adjustments

You can adjust the sound modes (BEAT, SOFT, POP: see page 23) to your preference and store your own adjustments in memory.

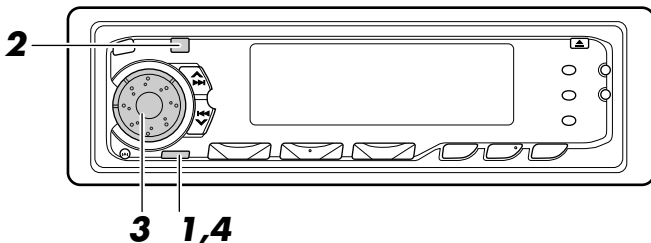


Call up the sound mode you want to adjust.
See page 23 for details.




Select "BASS", "TREBLE" or "LOUDNESS."

**Within
5 seconds**

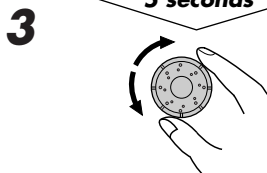

 Adjust the selected item.
See page 24 for details.



Press and hold the button until the setting selected in step 2 appears and starts flashing on the display.
Your setting is stored in memory.


5 Repeat the same procedure to store other settings.

To reset to the factory settings

Repeat the same procedure and reassign the preset values listed in the table on page 23.

Setting the clock

You can also set the clock system either to 24 hours or 12 hours. (See page 29.)

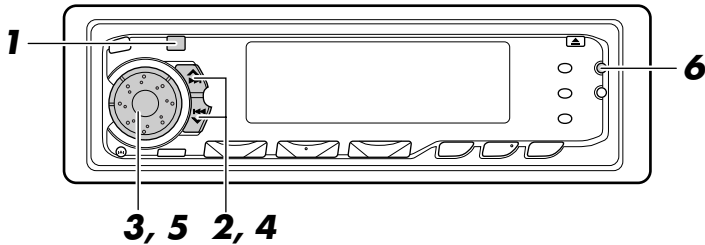

1




Press and hold the button for more than 2 seconds so that "PSM" appears on the lower part of the display.

2



3

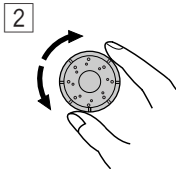


Set the hour.

- 1 Select "CLOCK HOUR" if not shown on the display.
- 2 Adjust the hour.

4



5

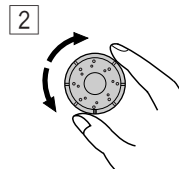

Set the minute.

- 1 Select "CLOCK MINUTE."
- 2 Adjust the minute.

6




Start the clock.

To check the current clock time while the unit is turned off, press DISP. The power turns on, the clock time is shown for 5 seconds, then the power turns off.


Changing the general settings (PSM)

You can change the items listed on the next page by using the PSM (Preferred Setting Mode) control.


Basic Procedure

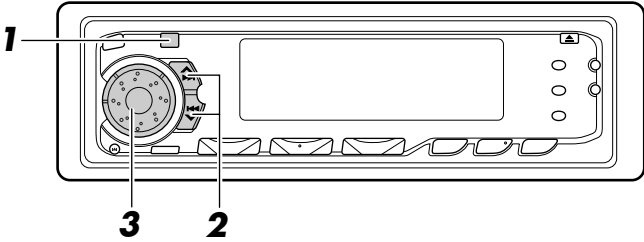

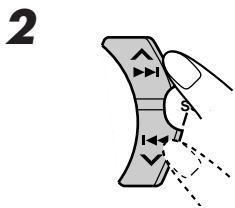


Press and hold the button for more than 2 seconds so that "PSM" appears on the lower part of the display.

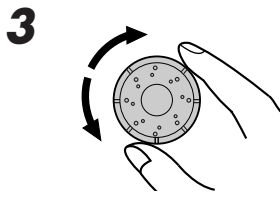

Select the PSM item you want to adjust. (See page 28.)



Select or adjust the PSM item selected above.

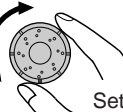1	2	3		Factory-preset settings	See page
	 Select.	 Set.			
CLOCK HOUR	Hour adjustment	Back	Advance	0:00	26
CLOCK MINUTE	Minute adjustment	Back	Advance		
CLOCK24H/12H	24/12-hour time display	12HOUR	24HOUR	24HOUR	29
AUTO ADJUST	Automatic setting of the clock	OFF	ON	ON	16
DISPLAY MODE	Display mode	FREQUENCY	PS NAME	PS NAME	15
PTY STANDBY	PTY standby	29 programme types (See page 17.)		NEWS	12
PTY SEARCH	PTY search			(See page 12.)	
TA VOLUME	Traffic announcement volume	VOL (00-50)		VOL (20)	15
LEVEL METER	Level display	NORMAL ↔ PEAK ↵ OFF ↻		NORMAL	29
DIMMER MODE	Dimmer	AUTO ↔ OFF ↵ ON ↻		AUTO	29
CRUISE MODE	Audio cruise	1 ↔ 2 ↵ OFF ↻		OFF	30
+ OR – RPM SET	Idling speed *	—		800 rpm	31
BOOST	Boost *	01 –15		05	31
TELEPHONE	Audio mute for cellular phone system	OFF ↔ MUTING 1 ↵ MUTING 2 ↻		OFF	32
BEEP SWITCH	Key-touch tone	OFF	ON	ON	32
P.AMP SWITCH	Power amplifier switch	OFF	ON	ON	32
CONTRAST	Display contrast	1 –10		5	33
SCROLL MODE	Name display	ONCE ↔ AUTO ↵ OFF ↻		ONCE	33

* When you select “1” or “2” for Audio Cruise Mode, you can adjust these items.

- Press SEL (Select) when the setting is complete.

Selecting 24-hour or 12-hour clock

You can change the clock built in this unit either to 24 hour system or 12 hour system.

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select the "CLOCK24H/12H" mode with ►►|▲ or |◀◀▼.
3. Select "CLOCK 24HOUR" or "CLOCK 12HOUR" with the control dial.
The clock built alternates between 24 hour system and 12 hour system.

24HOUR ↔ 12HOUR

Selecting the level display

You can select the level display according to your preference. When shipped from the factory, the level indicator on the display shows the audio level.

- NORMAL: Audio level indicator
- PEAK: Peak level indicator
- OFF: Volume level indicator

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select "LEVEL METER" with ►►|▲ or |◀◀▼.
3. Select the desired mode with the control dial.
The level display setting changes as follows:

► NORMAL ↔ PEAK ↔ OFF ◀

Selecting the dimmer mode

When you turn on the car head lights, the display automatically dims (Auto Dimmer).

When shipped from the factory, Auto Dimmer mode is activated.

- AUTO: Activates Auto Dimmer
- ON: Always dims the display
- OFF: Cancels Auto Dimmer

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select "DIMMER MODE" with ►►|▲ or |◀◀▼.
3. Select the desired mode with the control dial.
The dimmer mode changes as follows:

► AUTO ↔ ON ↔ OFF ◀

Note on Auto Dimmer:

Auto Dimmer equipped with this unit may not work correctly on some vehicles, particularly on those having a control dial for dimming.

In this case, set the dimmer mode to "ON" or "OFF".

Controlling the volume automatically (Audio Cruise Mode)

You can select the proper cruise mode for your car.

 
This unit change the volume level automatically (at 3 possible levels) based on the driving speed of your car by detecting the alternator's generating frequency (Audio Cruise).

If you want to use this mode, follow the procedures below. When shipped from the factory, this mode is set to "OFF."


- 1: Select this if your car is relatively quiet.
- 2: Select this if your car is relatively loud.
The volume increase rate is twice as much as that of the CRUISE 1 setting.
- OFF: Cancels Audio Cruise.

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select "CRUISE MODE" with $\blacktriangleright\blacktriangleright\blacktriangleright\blacktriangleup$ or $\blacktriangleleft\blacktriangleleft\blacktriangleleft\blacktriangledown$.
3. Select the desired mode with the control dial.

The cruise mode changes as follows:



When this function is turned on (the CRUISE indicator lights up on the display), the proper volume level is automatically selected among the 3 possible levels according to the driving speed, and the selected level is shown on the display.

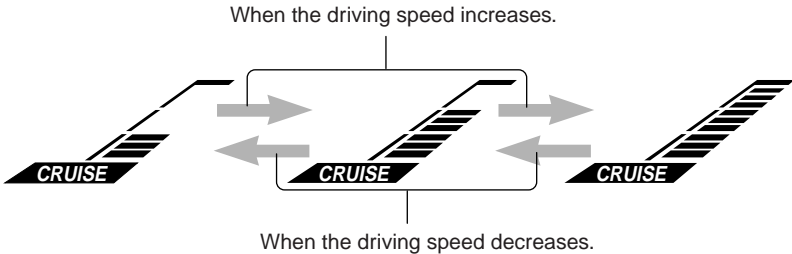

To adjust the volume increase rate

If you find Audio Cruise increases (or decreases) the volume either too much or too little as the driving speed changes. You can adjust the increase rate by changing the boost level. To change it, follow the procedure below.

1. Press and hold SEL (Select) for more than 2 seconds so that “PSM” appears on the lower part of the display.
2. Select “CRUISE MODE” with **▶▶|▲** or **|◀◀▼**.
3. Select either “CRUISE 1” or “CRUISE 2” with the control dial.
4. Select “BOOST” with **▶▶|▲** or **|◀◀▼**.
The current boost level appears on the display.
5. Select the desired boost level (among 1 to 15) as you want while the current boost level is shown on the display with the control dial.
 - To increase the volume increase rate, rotate it clockwise.
 - To decrease the volume increase rate, rotate it counterclockwise.

If Audio Cruise does not function correctly

You may need to store the idling speed into memory to make Audio Cruise function correctly.

NOTICE that a number of factors, such as electric power steering, wipers, power windows, air conditioner, etc. do generate noises and, as a result, may cause Audio Cruise not to function correctly. If this is the main cause of malfunction, connect the memory backup lead (yellow lead) directly to the car battery to prevent these noises from affecting Audio Cruise.

1. Start the engine and let it warm up.
2. Press and hold SEL (Select) for more than 2 seconds so that “PSM” appears on the lower part of the display.
3. Select “CRUISE MODE” with **▶▶|▲** or **|◀◀▼**.
4. Select either “CRUISE 1” or “CRUISE 2” with the control dial.
5. Select “+ OR – RPM SET” with **▶▶|▲** or **|◀◀▼**.
6. Select the desired idling speed as you want with the control dial.

When the setting is complete, the unit automatically checks to see if Audio Cruise functions correctly with this new idling setting. If it does not function correctly, Audio Cruise is canceled automatically and the idling setting becomes invalid.

- *If this happens, see the NOTICE above.*

Selecting the telephone muting

This mode is used when a cellular phone system is connected. Depending on the phone system used, select either "MUTING 1" or "MUTING 2," whichever mutes the sounds from this unit.

When shipped from the factory, this mode is deactivated.

- MUTING 1: Select this if this setting can mute the sounds.
- MUTING 2: Select this if this setting can mute the sounds.
- OFF: Cancels the telephone muting.

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select "TELEPHONE" with **▶▶|▲** or **|◀◀▼**.
3. Select the desired mode with the control dial.
The telephone muting mode changes as follows:



Turning on or off the key-touch tone

You can deactivate the key-touch tone if you do not want to make it beep when you press a button. When shipped from the factory, the key-touch tone is activated.

- ON: Activates the key-touch tone.
- OFF: Deactivates the key-touch tone.

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select "BEEP SWITCH" with **▶▶|▲** or **|◀◀▼**.
3. Select the desired mode with the control dial.
The key-touch tone alternates between on and off.

ON <-> OFF

Turning on or off the power amplifier switch

You can switch off the built-in amplifier and send the audio signals only to the external amplifier(s) to get clear sounds and to prevent internal heat buildup inside this unit. When shipped from the factory, the power amplifier switch is turned on so that built-in amplifier works.

- ON: Select this mode when not using external power amplifier(s).
- OFF: Select this mode when using external power amplifier(s).

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select "P.AMP SWITCH" with **▶▶|▲** or **|◀◀▼**.
3. Select the desired mode with the control dial.
The power amplifier switch alternates between on and off.

ON <-> OFF

Adjusting the contrast level

You can adjust the display contrast level (among 1 to 10). When shipped from the factory, the display contrast level is at level 5.

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select "CONTRAST" with ►►|▲ or |◄◄▼.
3. Select the desired mode with the control dial.

Selecting the scroll mode

You can select the scroll mode for the name display and disc information if it consists of more than 12 characters. When shipped from the factory, Auto Scroll mode is set to "ONCE."

- AUTO: Repeats the scroll (5-second intervals in between)
- ONCE: Scrolls only once
- OFF: Cancels Auto Scroll

1. Press and hold SEL (Select) for more than 2 seconds so that "PSM" appears on the lower part of the display.
2. Select "SCROLL MODE" with ►►|▲ or |◄◄▼.
3. Select the desired mode with the control dial.

The scroll mode changes as follows:




Note:

Even if the scroll mode is set to "OFF," you can scroll the display by pressing DISP for more than 1 second while changing display mode.

Assigning names to the sources

You can assign a name to a CD and the external component connected to the LINE IN plugs. After assigned a name, it will appear on the display when you select it.

Sources	Maximum number of the characters
CDs	up to 32 characters (up to 40 discs)
External component	up to 12 characters

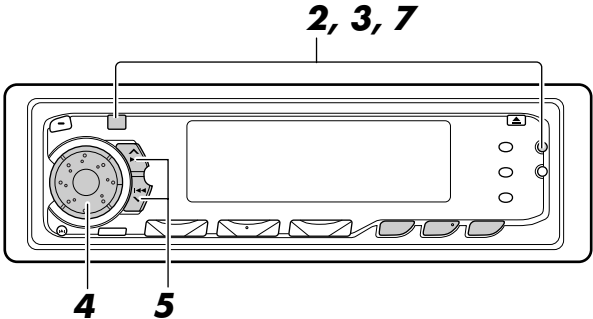


1 Select a source you want to assign a name to.


2 Press and hold SEL (select) for more than 2 seconds while pressing DISP.




When you select the CD as the source:

 
When you select the external component connected to the LINE IN plugs as the source:

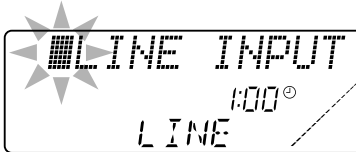




Select the character set you want while “” is flashing.

Each time you press the button, the character set changes as follows:

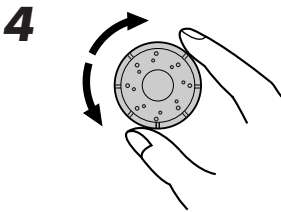


Select a character.

About the available characters, see page 36.

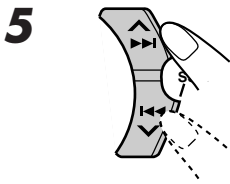

Move the cursor to the next (or previous) character position.

6 Repeat steps 3 to 5 until you finish inputting the name.

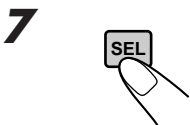

Press the button while the last selected character is flashing.

The input name is stored in memory.

To erase the input characters

Insert spaces using the same procedure described above.

Notes:

- When you assign a name to the 41st disc, “NAME FULL” appears on the display. (In this case, delete unwanted names before assignment.)
- When the CD changer CH-X1200 connected, you can assign names to CDs in CH-X1200. These names can also be shown on the display if you insert the CDs in this unit.
 You can also change the disc title of a CD Text by assigning a name to the disc. However, if you do so, its performer will not be shown after changing the disc title.

Available characters

Capital letters

A	B	C	D	E	F	G	H	I	J
K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z	space			

Small letters

a	b	c	d	e	f	g	h	i	j
k	l	m	n	o	p	q	r	s	t
u	v	w	x	y	z	space			

Numbers and symbols

0	1	2	3	4	5	6	7	8	9
!	”	#	\$	%	&	'	()	*
+	,	-	.	/	:	;	<	=	>
?	@	_	`	space					


Detaching the control panel

You can detach the control panel when leaving the car. When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.


How to detach the control panel

Before detaching the control panel, be sure to turn off the power.


- 1 Unlock the control panel.

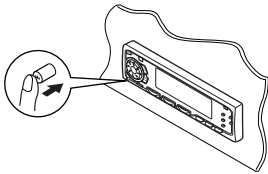

- 2 Pull the control panel out of the unit.

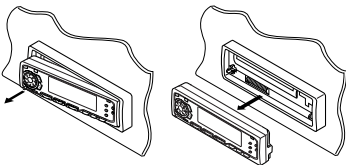


- 3 Put the detached control panel into the provided case.

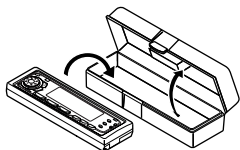


How to attach the control panel

- 1 Insert the right side of the control panel into the groove on the panel holder.

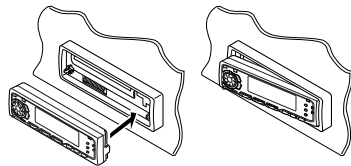

- 2 Press the left side of the control panel to fix it to the panel holder.

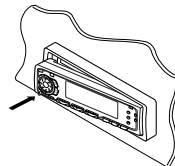

Note on cleaning the connectors:
 If you frequently detach the control panel, the connectors will deteriorate. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.


Connectors



REMOTE OPERATIONS


Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

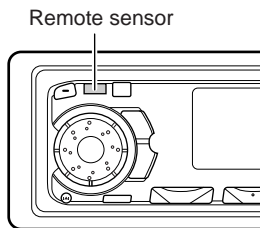

Installing the batteries


When it becomes necessary to bring the remote controller close to the remote sensor for it to work, the battery is running low, at this point, the battery should be replaced. (Battery life is about 1 year with normal use.)

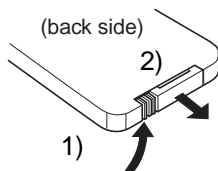

1. Remove the battery case.


- 1) Push in the direction indicated by the arrow with your right hand thumbnail.
- 2) Remove the battery case.

Lithium coin battery
(product number:
CR2025)

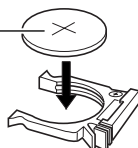

2. Replace the battery.

Put the battery in the case with the + side facing upwards.

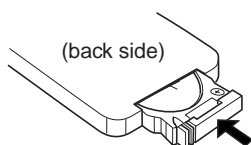

3. Return the battery case.


Insert again the battery case pushing until you hear a clicking sound.

WARNING:

- Store the batteries in a place which children cannot reach.
If a child somehow ingests the battery, immediately consult a doctor.
- Do not recharge, short, disassemble or heat the batteries or put them in a flame.
Doing any of these things may cause the batteries to give off heat, crack or start a fire.
- Do not mix the batteries with other metals.
Doing this may cause the batteries to give off heat, crack or start a fire.
- When throwing away or saving the batteries, wrap in tape and insulate.
If this is not done, it may cause the batteries to give off heat, crack or start a fire.
- Do not poke the batteries with a metal pin set of similar device.
Doing this may cause the batteries to give off heat, crack or start a fire.



Using the remote controller

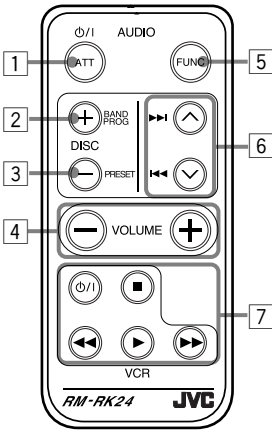

- 1 Functions the same as the ⏻/ATT button on the main unit.
- 2
 - Functions as the BAND button while listening to the radio. Each time you press the button, the band changes.
 - Functions as the DISC + button while listening to the CD changer. Each time you press the button, the disc number increases, and the selected disc starts playing.
 - Does not function as the PROG button.
- 3
 - Functions as the PRESET button while listening to the radio. Each time you press the button, the preset station number increases, and the selected station is tuned in.
 - Functions as the DISC – button while listening to the CD changer. Each time you press the button, the disc number decreases, and the selected disc starts playing.
- 4 Functions the same as the control dial on the main unit.
 - Does not function for the preferred setting mode adjustment.
- 5 Select the source. Each time you press FUNC (function), the source changes.
- 6
 - Searches stations while listening to the radio.
 - Fast forwards or reverses the track if pressed and held while listening to a CD.
 - Skips to the beginning of the next tracks or goes back to the beginning of the current (or previous tracks) if pressed briefly while listening to a CD.
- 7
 - ⏻: Turns on or off a VCR if pressed.
 - ■: Stops playing a tape if pressed.
 - ◀◀: Rewinds a tape if pressed and held while watching a VCR.
 - ▶▶: Starts playing a tape if pressed.
 - ▶▶▶: Fast forwards a tape if pressed and held while watching a VCR.



CD CHANGER OPERATIONS


We recommend that you use one of the CH-X series (ex: CH-X1200) with your unit. If you have another CD automatic changer, consult your JVC IN-CAR ENTERTAINMENT dealer for connections.

- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.


Before operating your CD automatic changer:

- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If "RESET 1 - RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

Playing CDs

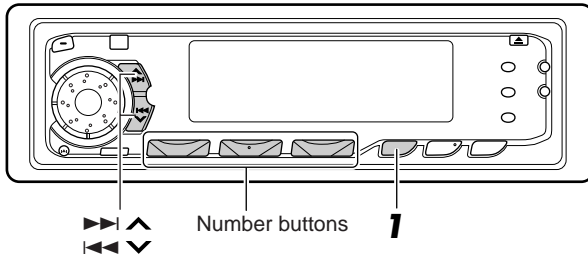


1

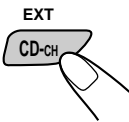

Select the CD automatic changer.

Each time you press the button, you can select the CD automatic changer and the external component alternately.

Playback starts from the first track of the first disc.
All tracks of all discs are played back.

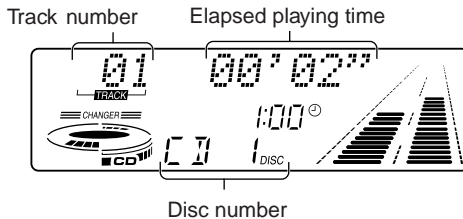


Note on One-Touch Operation:


When you press CD-CH/EXT, the power automatically comes on. You do not have to press /ATT to turn on the power.




To fast forward or reverse the track

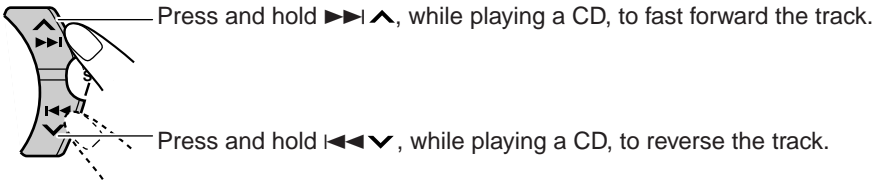

To go to the next track or the previous track

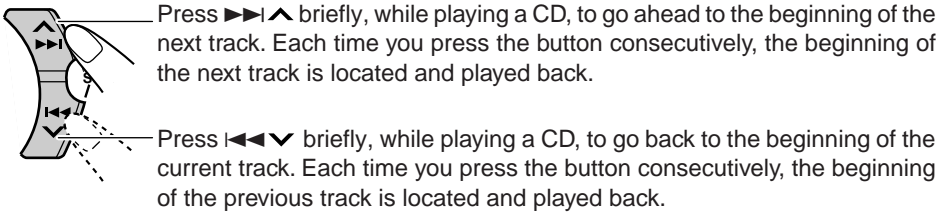


To go to a particular disc directly

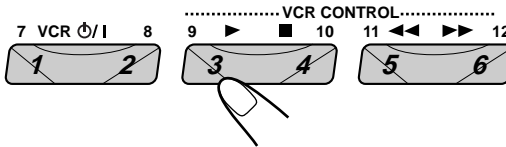

Press the number button corresponding to the disc number to start its playback (while the CD changer is playing).

- To select a disc number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a disc number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.

Ex. When disc number 3 is selected

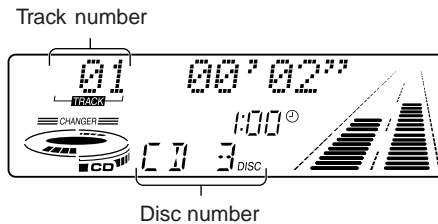


To show the CD Text information

See "Playing the CD Text" on page 22.




Selecting CD playback modes

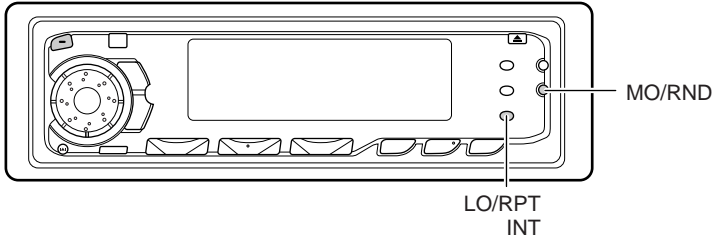

To play back tracks at random (Random Play)


 
Each time you press MO/RND (Mono/Random) while playing a CD, CD random play mode changes as follows:



Mode	RND Indicator	Plays at random
RANDOM1	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RANDOM2	Flashes	All tracks of all discs inserted in the magazine.

To play back tracks repeatedly (Repeat Play)

  Each time you press and hold LO/RPT/INT (Local/Repeat/Intro) for more than 1 second while playing a CD, CD repeat play mode changes as follows:



Mode	RPT Indicator	Plays repeatedly
REPEAT1	Lights	The current track (or specified track).
REPEAT2	Flashes	All tracks of the current disc (or specified disc).

To play back only intros (Intro Scan)

Each time you press LO/RPT/INT (Local/Repeat/Intro) briefly while playing a CD, CD intro scan mode changes as follows:




Mode	Indication	Plays the beginnings (15 seconds)
INTRO 1	Track number flashes	Of all tracks on all inserted discs.
INTRO 2	Track and Disc numbers flash	Of the first track on each inserted disc.

EXTERNAL COMPONENT OPERATIONS




After connecting a VCR (KV-V10) to the LINE IN plugs, you can perform the following operations. You can also connect the TV to this unit.

Playing VCRs

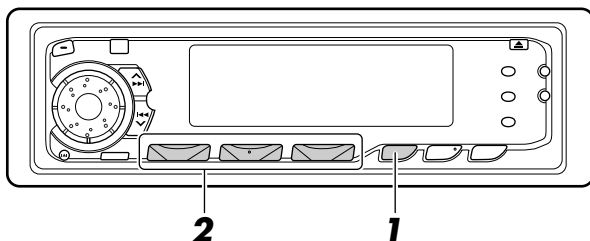

1

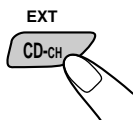


Select the external component.

Each time you press the button, you can select the CD automatic changer and the external component alternately.



2

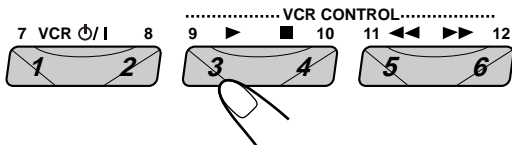

Operate VCRs.

- VCR **O/I**: Turns on and off.
- ▶**: Starts playing.
- : Stops operations.
- ◀◀**: Rewinds a tape.
- ▶▶**: Fast winds a tape.

Note:



When selecting an external component as the source, the display always shows "VCR ..." by pressing these buttons regardless of whether you connect VCR or not.

Note on One-Touch Operation:

When you press CD-CH/EXT, the power automatically comes on. You do not have to press **O/I/ATT** to turn on the power.

?! MAINTENANCE

Handling CDs

This unit has been designed only to reproduce the CDs bearing the  and  marks. Other discs cannot be played back.


How to handle CDs

When removing a CD from its case, press down the center holder of the case and lift the CD out, holding it by the edges.

- Always hold the CD by the edges. Do not touch its recording surface.

When storing a CD into its case, gently insert the CD around the center holder (with the printed surface facing up).

- Make sure to store CDs into the cases after use.

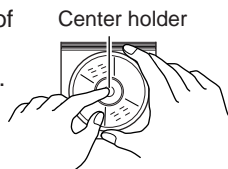



To keep CDs clean

A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.

To play new CDs

New CDs may have some rough spots around the inner and outer edges. If such a CD is used, this unit may reject the CD.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

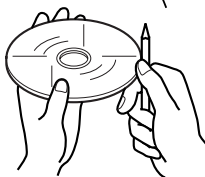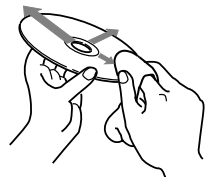

Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the CD and leave the unit turned on for a few hours until the moisture evaporates.

CAUTIONS:

- Do not insert 8cm (3 3/16") CDs (single CDs) into the loading slot. (Such CDs cannot be ejected.)
- Do not insert any CD of unusual shape – like a heart or flower; otherwise, it will cause a malfunction.
- Do not expose CDs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean CDs.


About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the CD, but will be annoying.

We recommend that you stop CD play while driving on such rough roads.

TROUBLESHOOTING

What appears to be trouble is not always serious. Check the following points before calling a service centre.

Symptoms	Causes	Remedies
• CD cannot be played back.	CD is inserted upside down.	Insert the CD correctly.
• CD sound is sometimes interrupted.	You are driving on rough roads.	Stop CD play while driving on rough roads.
	CD is scratched.	Change the CD.
	Connections are incorrect.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume control is turned to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
	“P. AMP (Power Amplifier) SWITCH” is not set correctly.	Set “P. AMP SWITCH” correctly. See page 32.
• SSM (Strong-station Sequential Memory) automatic preset does not work.	Signals are too weak.	Store stations manually.
• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
• “NO DISC” appears on the display.	No CD is in the loading slot (or in the magazine).	Insert CD.
	CD is inserted incorrectly.	Insert it correctly.
• “RESET 8” appears on the display.	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
• “RESET 1-RESET 7” appears on the display.	_____	Press the reset button of the CD changer.
• CD can be neither played back nor ejected.	The CD player may function incorrectly.	Press CD and SEL at the same time for more than 2 seconds. (“PLEASE EJECT” appears on the display.) When you open the control panel by pressing ▲, be careful not to drop CD when it is ejected.
• The unit does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press  /I/ATT and SEL at the same time for more than 2 seconds to reset the unit. (The clock setting and preset stations stored in memory are erased.)

SPECIFICATIONS

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 40 watts per channel

Rear: 40 watts per channel

Continuous Power Output (RMS):

Front: 16 watts per channel into 4 Ω , 40 to 20,000 Hz at no more than 0.8 % total harmonic distortion.

Rear: 16 watts per channel into 4 Ω , 40 to 20,000 Hz at no more than 0.8 % total harmonic distortion.

Load Impedance: 4 Ω (4 to 8 Ω allowance)

Tone Control Range:

Bass: ± 10 dB at 100 Hz

Treble: ± 10 dB at 10 kHz

Frequency Response: 40 to 20,000 Hz

Signal-to-Noise Ratio: 70 dB

Line-In Level/Impedance: 1.5 V/20 k Ω

Line-Out Level/Impedance: 4.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

TUNER SECTION

Frequency Range:

FM: 87.5 to 108.0 MHz

AM: (MW) 522 to 1,620 kHz

(LW) 144 to 279 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 to 15,000 Hz

Stereo Separation: 30 dB

Capture Ratio: 1.5 dB

[MW Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

[LW Tuner]

Sensitivity: 50 μ V

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 to 20,000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:

Operating Voltage: DC 14.4 volts (11 to 16 volts allowance)

Grounding System: Negative ground

Dimensions (W x H x D)

Installation Size:

182 x 52 x 150 mm

Panel Size: 188 x 58 x 14 mm

Mass: 1.4 kg (excluding accessories)

Design and specifications subject to change without notice.



JVC

VICTOR COMPANY OF JAPAN, LIMITED



EN, GE, FR, NL



Printed in Singapore
0698MNMMDWJES